



ELEVATOR LIFT OWNER'S MANUAL



MODEL NUMBER: E3000; E5000; E7000; E10000; E12000; E15000; E17000; E20000; E24000; E30000

Dealer: _____

Install Date: _____

Owner's Name: _____

Serial Number: _____

Congratulations on purchasing a Golden Elevator boat lift and thank you for your business. You've chosen the finest boat lift on the market. Built with premium materials, uncompromising workmanship, unparalleled innovation, and rigorous quality control, your Elevator lift will deliver years of consistent, dependable operation.

This Owner's Manual covers everything you need to know about the safety, operation, and maintenance of your new Elevator model, from the **E-3000** through the **E-20000**. You can rest easy knowing your boat is cradled by GOLDEN.

When It's Done Right... It's Golden!

CAUTION: READ OPERATING INSTRUCTIONS CAREFULLY




PRECAUTIONS BEFORE OPERATING THE LIFT SYSTEM

- A licensed electrician **MUST** wire the lift!
- **DO NOT** Operate the boat lift without Ground Fault Circuit Interrupter (GFCI).
- Keep hands clear of all moving parts.
- Boat lifts are **NOT** intended for lifting humans. **DO NOT** operate with people aboard.
- **NEVER** leave the lift unattended while in operation.
- **DO NOT** exceed the rated capacity.
- **DO NOT** operate the boat lift without **ALL** protective covers in place.
- The boat lift must be operated in the presence of an adult over 21.
- **DO NOT WORK ON OR GO UNDER YOUR BOAT WHILE ON THE LIFT!**

COMPLIANCE WITH GENERAL SAFETY AND WARNINGS
WILL PREVENT INJURY TO PERSONS AND DAMAGE TO
YOUR BOAT

WEIGHT DISTRIBUTION AND SAFE OPERATING PROCEDURES:

- Distribute the boat's weight evenly across the beams to ensure safe operation and extend the life of the lift. Consult the boat manufacturer for the boat's lifting points and center of gravity.
- Always place the center of gravity of your boat directly in the CENTER of your cradle beams.
- Please consult with your installer for assistance and proper placement of your boat on the lift.

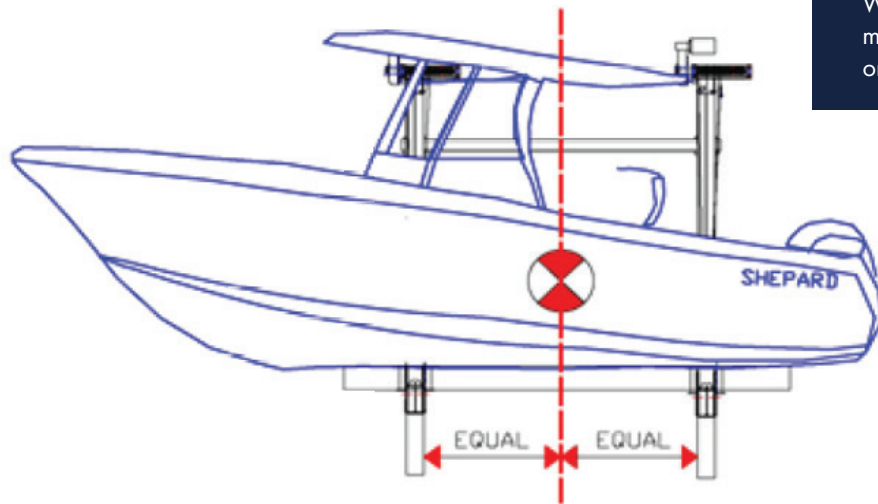

When your boat is properly centered on the lift mark a spot or feature that aligns with the forward or aft guide pole for easy proper docking.

- The boat lift cradle beams must be lowered below the draft of the boat before you drive your boat over the cradle beams. (Hint: At installation mark the guide pole at the water line when the cradle beams are below the boat. When docking, no matter the tide level the cradles will always be below the boat when the mark is at the waterline.)
- When you raise the boat, you must raise it far enough that the cradle beams are above the highest point the water may reach.
- Inspect the cables before each use.
- Replace any damaged or frayed cables immediately.

Golden Boat Lifts has supplied Zinc anodes to help reduce the corrosion that is possible in some locations. Please check them and replace them as required.

Lock your control box and turn off electricity to your lift when not in use. This will help eliminate corrosion and reduce the chance of theft.



BOAT LIFT MAINTENANCE


Golden Boat Lifts are designed to provide years of service with very little maintenance.

We recommend grease in the points depicted two times per year. The Sea-Drive is lubricated for life.

Flat Plate - recommended to grease very often (every ten uses).

TO KEEP YOUR LIFT IN OPERATING SERVICE:

1. Grease all fittings consisting of one at each end of winders, lower pulley blocks, and upper pulley block on E-12000 and up.
2. Flat Plate Drive: remove cover and grease the gear bearing blocks and behind drive gear.
3. Inspect all cables for wear and kinking. Replace **ALL** WORN OR DAMAGED CABLE.
4. Inspect electrical cables and test GFCI for proper function. Damage to cable insulation or loose connections should be immediately repaired by a qualified electrician.
5. Wipe all exposed aluminum surfaces.
6. Rinse cables, rollers, and all submersible parts after each use.

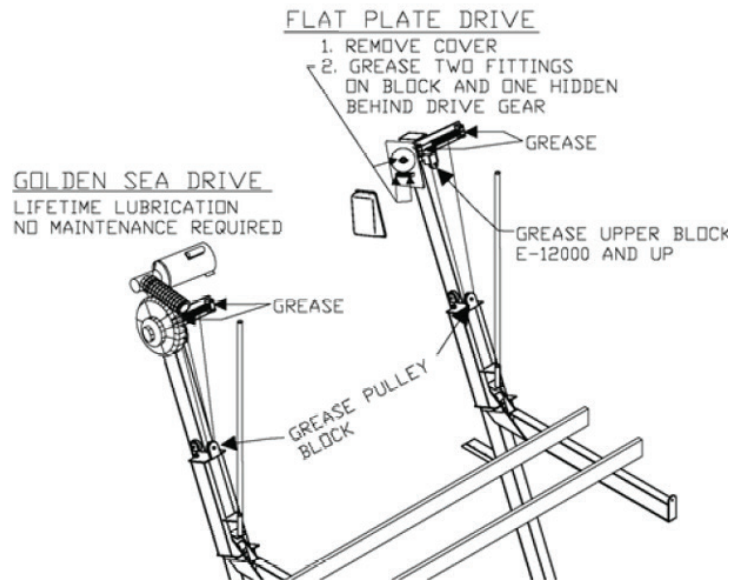


WITHOUT EXCEPTION WARRANTY COVERAGE WILL NOT EXTEND TO DAMAGE CAUSED BY ELECTROLYSIS!

Inspect the zinc anodes regularly and replace them when they are worn or deformed. Each track beam has one anode, located underwater and suspended by a 1/8-inch cable bolted to the lift.

Dear Customer:


All Elevator Lifts are required to be equipped with one of two electrical safety features to prevent damage from electrolysis. You must have either a **4-Pole Disconnect Switch** installed and in the **OFF** position while your boat lift is not in use **OR** a **Removable Power Plug** must be installed and **UNPLUGGED** while lift is not in use. Failure to have either of these devices installed by a licensed electrician may result in corrosion or deterioration of the aluminum track I-beams as well as **VOID** of Warranty. Golden Boat Lifts and their Representatives will not be held liable for damage or failure due to mis installation or oversight of either of the required devices.

4-Pole Disconnect

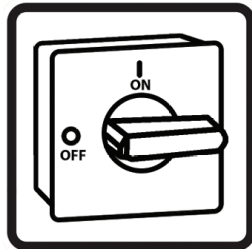

4-Pole Disconnect installed & in off position when Boat Lift not in use.

Power Plug

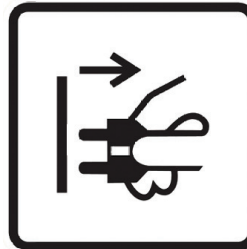

Disconnect plug when Boat Lift not in use.

