




4 POST LIFT OWNER'S MANUAL

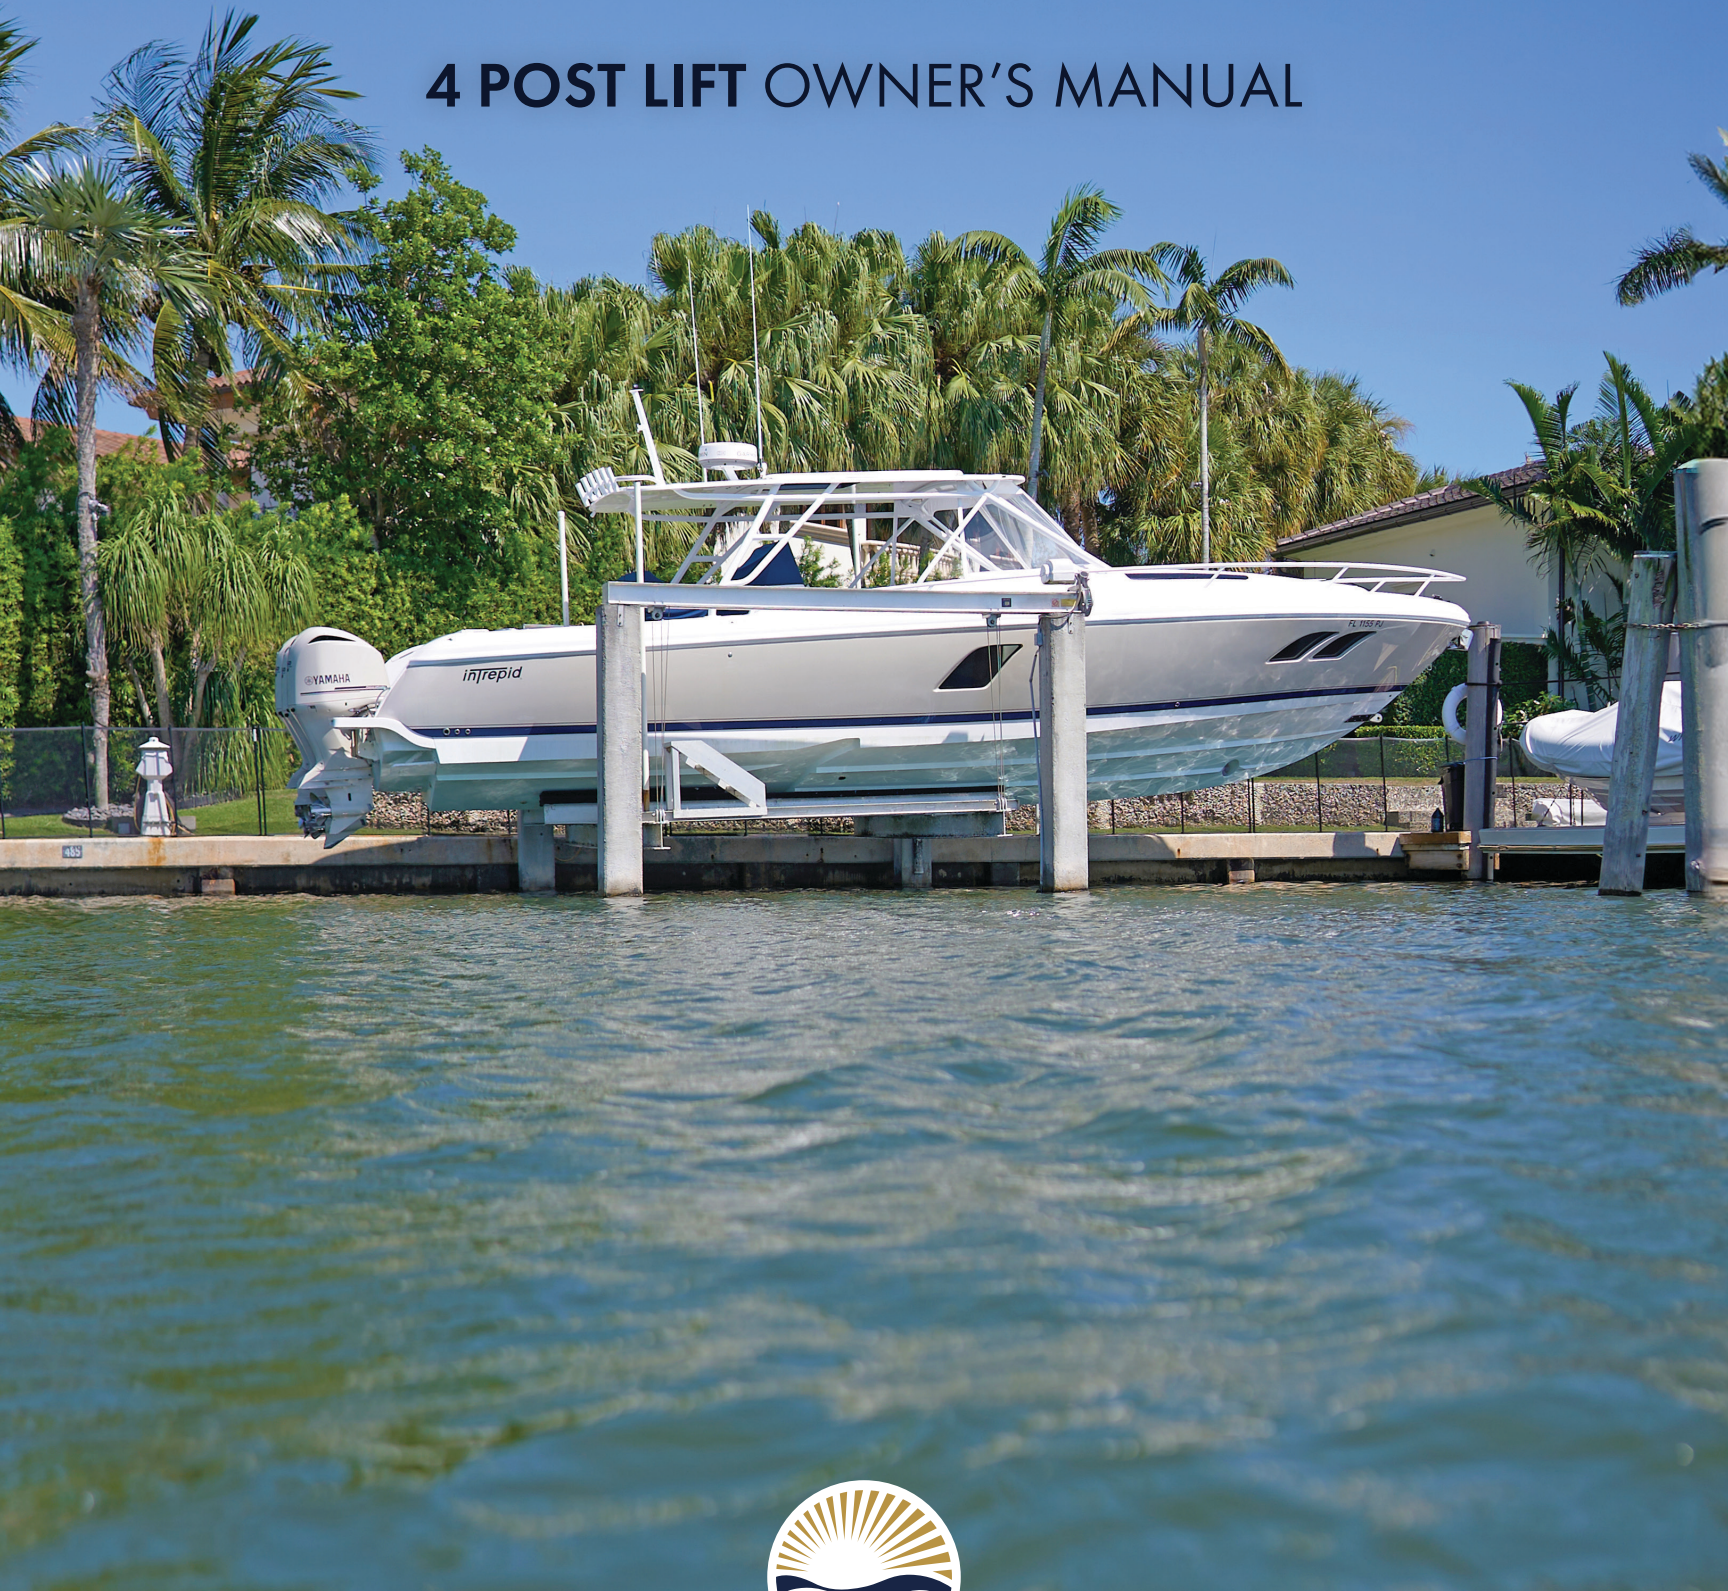

4.5K - 28K: 4 POST 2 MOTOR BOAT LIFTS

Dealer: _____

Install Date: _____

Owner's Name: _____

Serial Number: _____

Congratulations on purchasing a Golden 4 Post boat lift and thank you for your business. You've chosen the finest boat lift on the market. Built with premium materials, uncompromising workmanship, unparalleled innovation, and rigorous quality control, your 4 Post lift will deliver years of consistent, dependable operation.

This Owner's Manual covers everything you need to know about the safety, operation, and maintenance of your new 4 Post model. You can rest easy knowing your boat is cradled by GOLDEN.

When It's Done Right... It's Golden!

CAUTION: READ OPERATING INSTRUCTIONS CAREFULLY



PRECAUTIONS BEFORE OPERATING THE LIFT SYSTEM

- NEVER leave the lift unattended while in operation.
- Be sure the boat stays level when raising and lowering the boat.
- DO NOT run the cradles down allowing the cables to slack.
- If the cables go slack be sure to realign and tighten the cables before lifting the boat.
- Keep hands clear of moving parts.
- DO NOT exceed the rated capacity.
- Boat lifts are not intended for lifting humans.
- DO NOT Operate the boat lift without Ground Fault Circuit Interrupter (GFCI).
- The lift MUST be wired by a licensed electrician.
- Inspect and lubricate all grease fittings periodically.
- Inspect the cables before each use.
- The boat lift must be operated by an adult.
- Be sure the center of gravity of your boat is in the center of the lift.
- DO NOT operated the lift without the protective covers in place.
- DO NOT WORK ON YOUR BOAT OR GO UNDER IT WHEN THE BOAT IS ON THE LIFT.
- NOTE: (1) The boat lift cradles must be lowered to a point that is below the draft of the boat before you drive the boat over the boat lift cradle. (2) When you raise the boat lift you must raise the cradle far enough so the cradle is away from the highest point the water may reach.

COMPLIANCE WITH GENERAL SAFETY AND WARNINGS
WILL PREVENT INJURY TO PERSONS AND DAMAGE TO
YOUR BOAT



Copyright © 2026 Golden Boat Lifts


239.337.4141
sales@GoldenBoatLifts.com
GoldenBoatLifts.com



WEIGHT DISTRIBUTION AND SAFE OPERATING PROCEDURES:

- The weight of your boat must be equally distributed on the beams to ensure your safety, the boat hull and longevity of the lift.
- Always place the center of gravity of your boat directly in the CENTER of the lift beams.
- Please consult your installer and boat manufacturer for proper bunking of the hull on the lift support equipment.
- The bunk boards were adjusted to fit a single hull and are NOT interchangeable. For a different boat re-adjust the bunk boards. the boat manufacturer for the boat's lifting points and center of gravity.

The center of gravity of your boat as a rule of thumb is about 1/3 distance from the stern and 2/3 distance from the bow. Your boat manufacturer can tell you the exact location. In the illustration below depicting the lift center equal distance side to side and front to back.

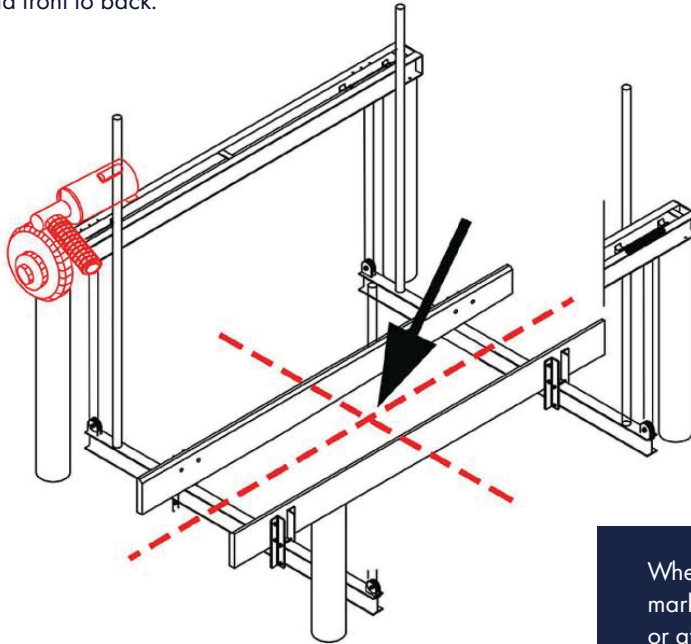

When your boat is properly centered on the lift mark a spot or feature that aligns with the forward or aft guide pole for easy proper docking.



BOAT LIFT MAINTENANCE


Golden Boat Lifts are designed to provide years of service with very little maintenance.

We recommend grease in the points depicted two times per year. The Sea-Drive is lubricated for life.

Flat Plate - recommended to grease very often (every ten uses).

TO KEEP YOUR LIFT IN OPERATING SERVICE:

1. Grease all fittings with high temperature (550), water resistant, high impact grease.
2. Inspect all stainless steel cable for fraying, kinking. It is helpful to take a soft cotton cloth and rub down the cables where they experience both the winder and the pulley.
3. Inspect all electrical components and wiring. Replace if damaged or worn.
4. Rinse all cables, pulleys and submersible parts with fresh water after use.

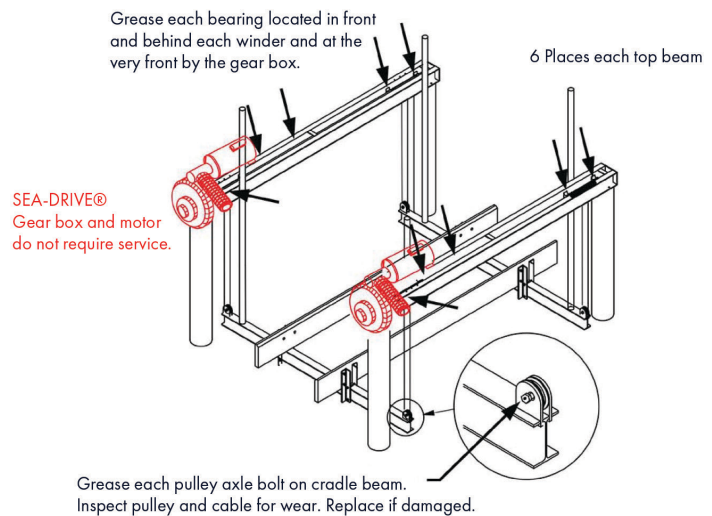

WITHOUT EXCEPTION WARRANTY COVERAGE WILL NOT EXTEND TO DAMAGE CAUSED BY ELECTROLYSIS!

Under NO circumstances will warranty coverage extend to damage caused by ELECTROLYSIS. Keep the lift's electrical connection off when not in use.

GENERAL INFORMATION

Golden Boat Lifts warranty is the longest and most comprehensive warranty in the industry. Our lift is simple to maintain and the most reliable lift in the industry. We are very proud of our product. Golden Manufacturing asks that you grease the easily accessed fittings and check the cables. All other components are maintenance free.

The electrical controls and optional remote control information is covered in the electrical control Manufacturer's information package. You may consult their website for additional information covering their product.

If your lift has an optional Auto-Stop the installer will make adjustments at the time of the installation. However, if additional adjustments are required we recommend having this done professionally.

ACCESSORIES FOR YOUR LIFT

- Walkways and boarding platforms
- Top Beam Covers
- Platforms
- Accent LED lighting
- Walkway Steps
- Cable Keeper extension device
- Motor covers

Consult our website: Goldenboatlifts.com for the latest information and accessories.

ENJOY THE GOLDEN EXPERIENCE!



Copyright © 2026 Golden Boat Lifts



239.337.4141
sales@GoldenBoatLifts.com
GoldenBoatLifts.com

